


AP Systems Reconnection Instructions




1. Locate your AP systems ECU unit and be sure it's plugged in and has power. Press the "AP" button found on the side. *Note: It normally takes several minutes for the WiFi network to appear in step #2.*




2. On your smartphone or tablet, go to your WiFi settings, and select the network named "ECU_#####" that appears after a few minutes.

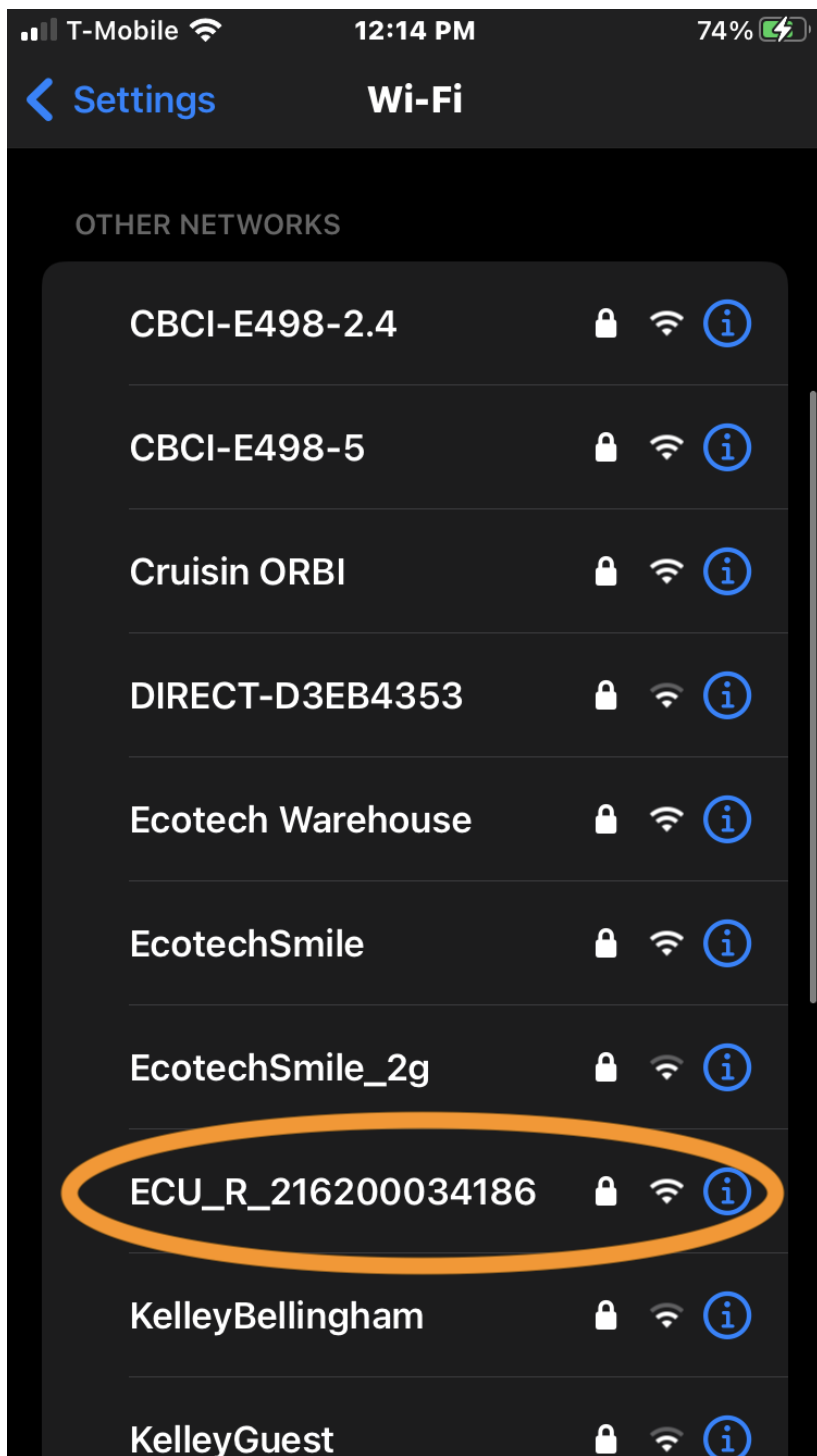


3. Enter the password "88888888" (ie. eight 8's)

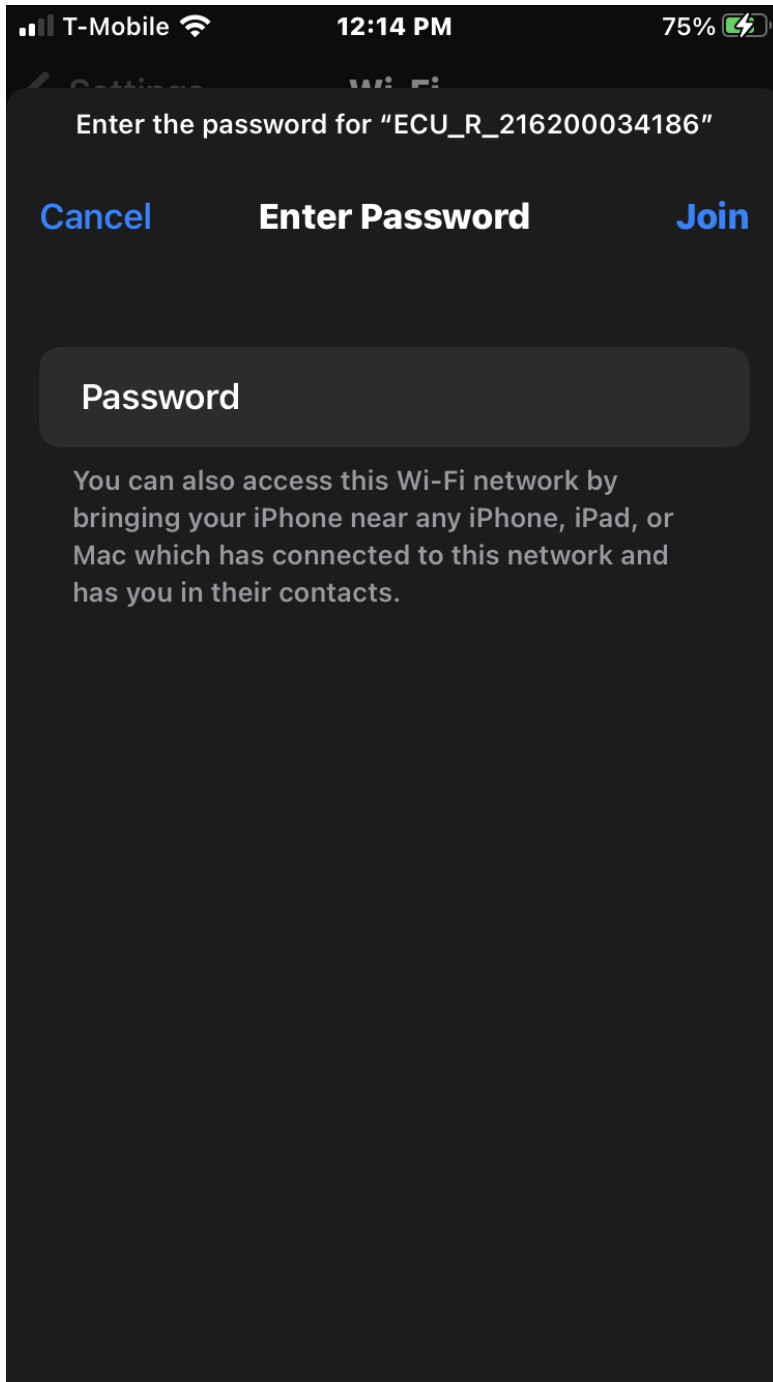

4. Open the **“EMA Manager App”**, and be sure to select **“Local access”** to connect directly to your ECU.

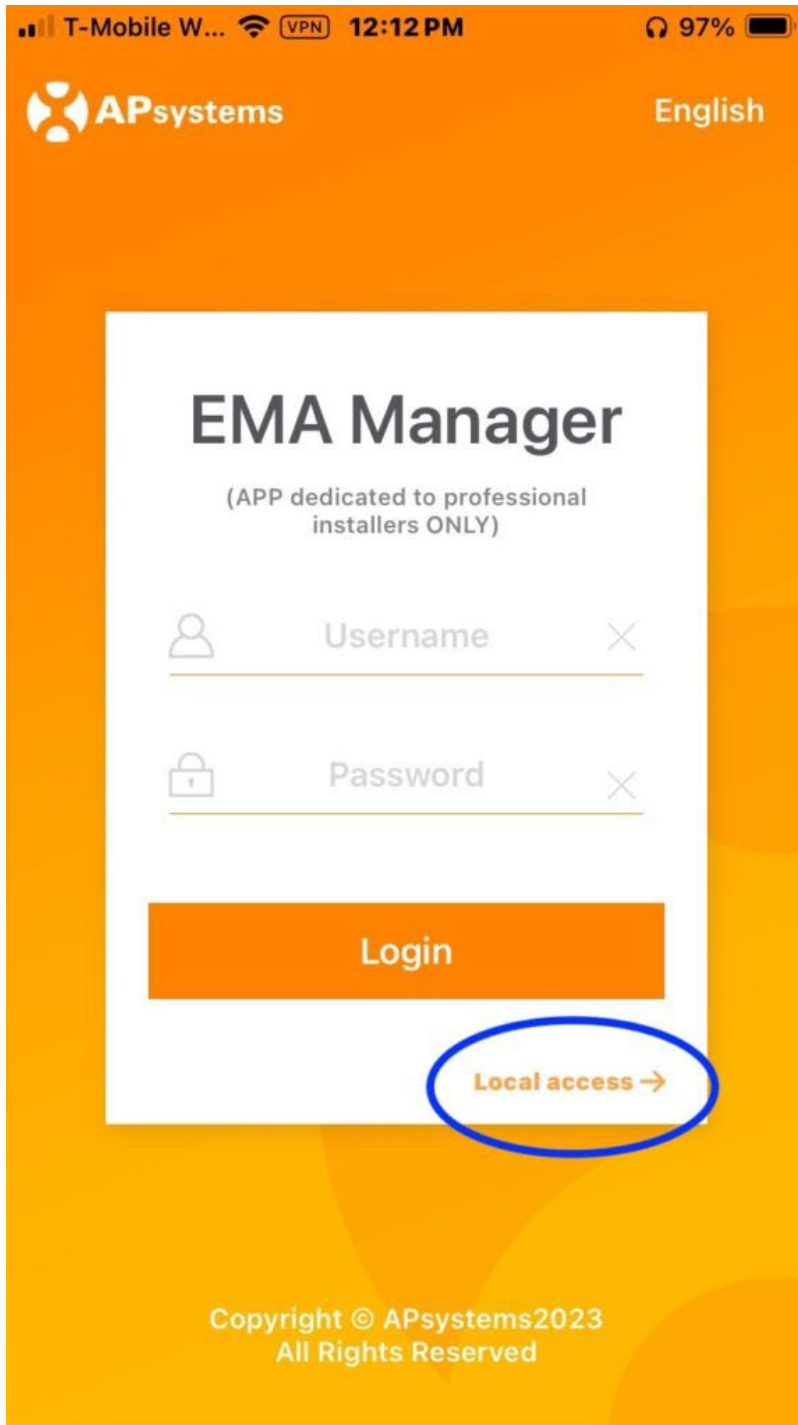

5. From the homescreen, note the “Internet Disconnected” status. Select “Workspace” at the bottom.

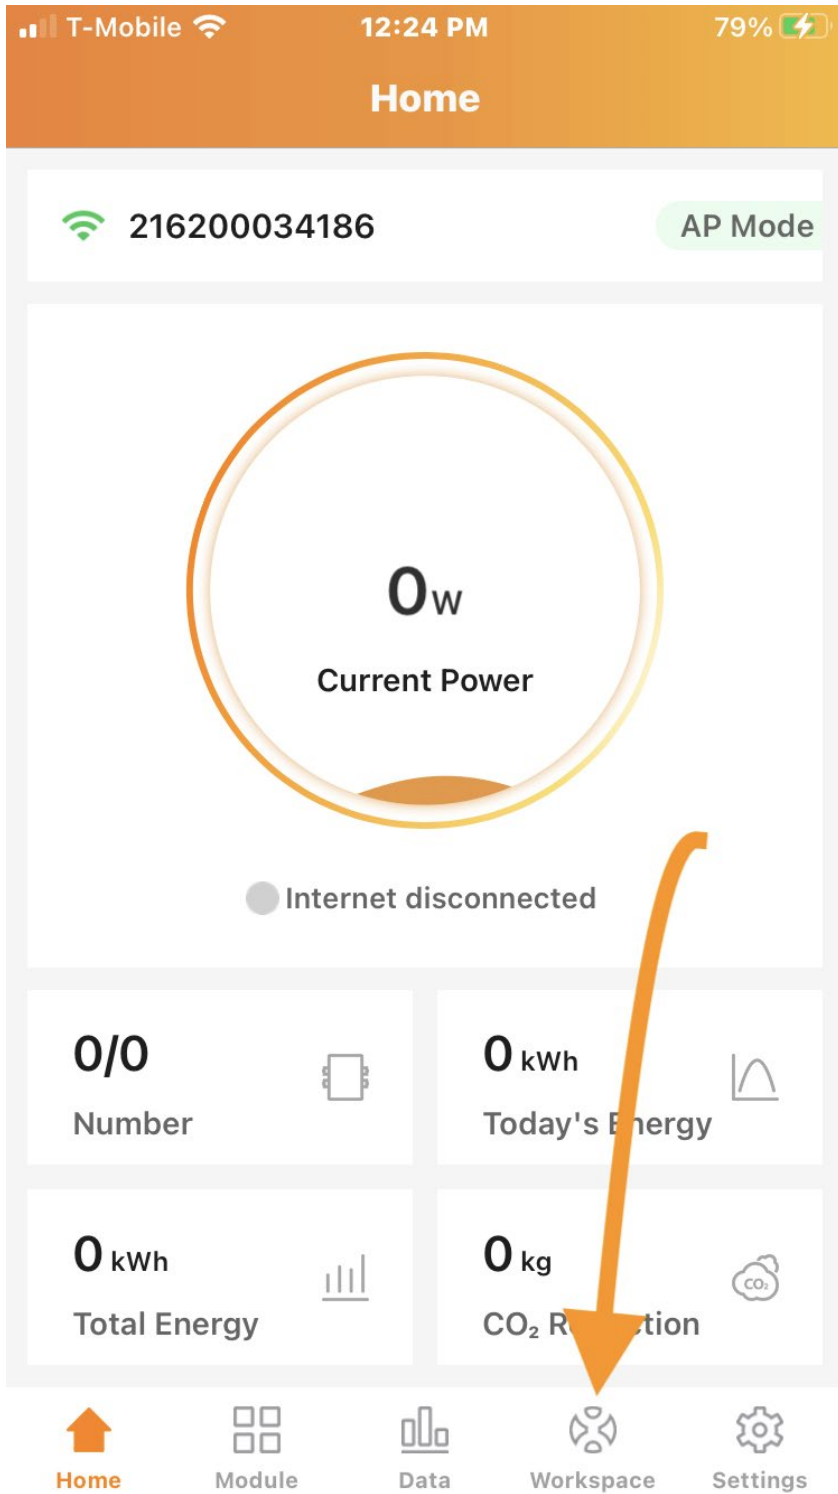

6. Select "ECU Network Settings" from the Workspace menu

● 216200034186

Version: 2.0.7

Last communication: 2022-08-15 12:24

System Configuration ▼



Automatic System Check



Do-It-Yourself Registration

Inverter Configuration ▼



ID Management



Grid Profile



Inverter Connection Progress

ECU Configuration ▼



ECU Network Settings



ECU AP Settings



ECU Date Settings

Menu Configuration ▼



Home



Module



Data




Workspace




Settings

7. Select "WLAN Settings" to choose your Wi-Fi network

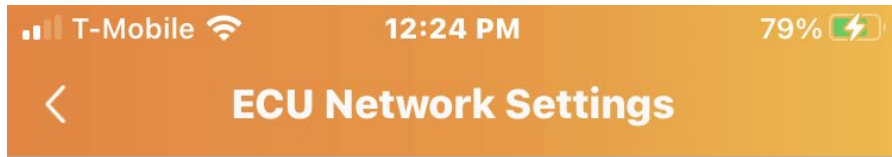


WLAN Settings >

 
LAN Settings >



8. Toggle WLAN (also known as Wi-Fi) on, the toggle switch should be **orange**

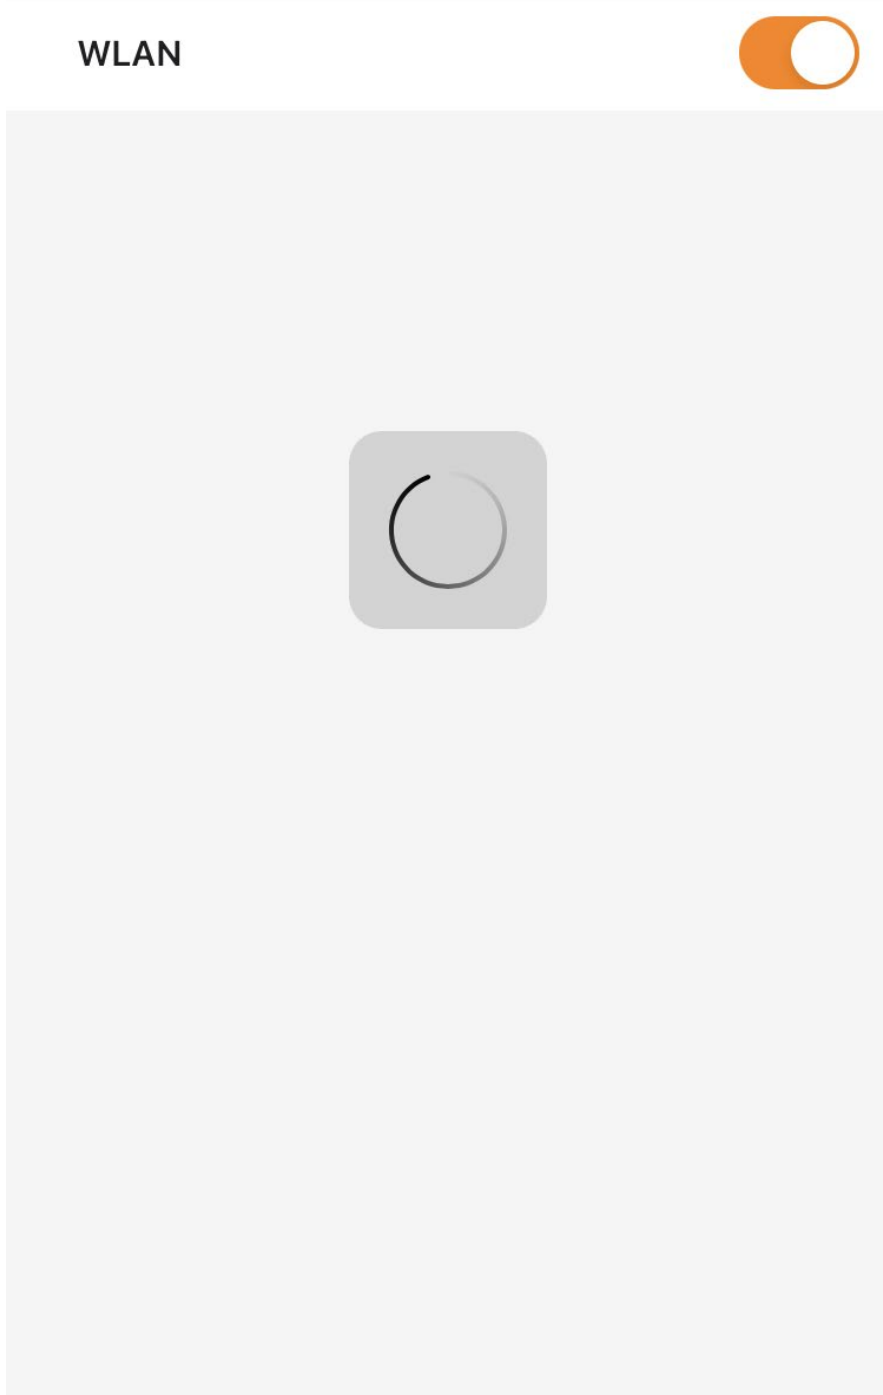

9. Choose your Wi-Fi network from the list that appears, and enter your Wi-Fi password

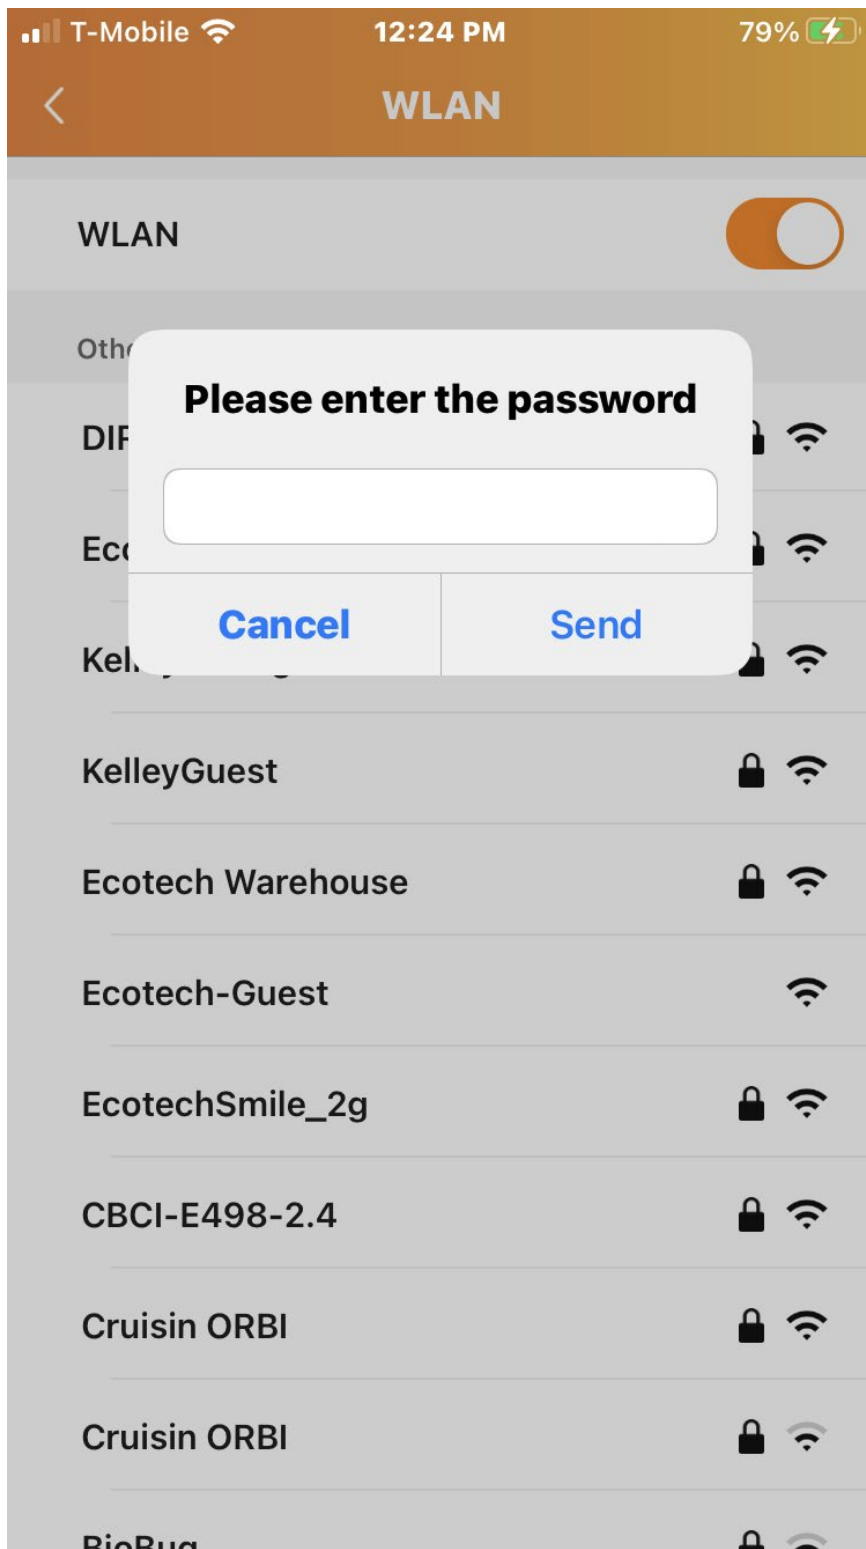

10. To confirm you are connected, go back to the “Home” screen of the EMA Manager App, and after a few minutes the status should change to “Internet Connected”

Home

216200034186

AP Mode



Internet connected

0/0

Number



0 kWh

Today's Energy



0 kWh

Total Energy



0 kg

CO₂ Reduction



Home



Module



Data



Workspace



Settings